



Smart vnitřní zásuvka Nexa s
kolíkem, Immax NEO, typ E, 1xUSB,
1xUSB C, PD 20W, WiFi

07544L

EAN: 8592957075443

Technická specifikace:

Barva: bílá
Protokol: Wi-Fi IEEE 802.11b/g/n
Frekvence: 2400MHz~2483.5MHz
Maximální RF výstupní výkon: WiFi: 20dBm
Bezdrátový dosah: 30 m přímá viditelnost, 5 m v zastavěném prostoru
Jmenovité napětí: AC 230V ± 10%, 50/60 Hz
Maximální zatížení: 3200W, 16A
Výstup USB: 20W
Power delivery: Ano
USB-A: 9V/2.2A, 12V/1.67A
USB-C: 9V/2.2A, 12V/1.67A
USB-A + USB-C: 9V/1.1A; 12V/0.84A max.
Ochrana proti přepětí: 265V
Ochrana proti podpětí: 90V
Pracovní teplota: 0 °C ~ 40 °C (32 °F ~ 104 °F)
Pracovní vlhkost: 10% ~ 90%
Stupeň krytí: IP20
Funkce v aplikaci: ZAP / VYP, Časovač, Odpočet, Měření spotřeby
Velikost: 8 cm x 8 cm x 5 cm
Váha: 129g
Obsah balení: Vnitřní zásuvka, uživatelský manuál

Zkrácená verze prohlášení o shodě

Tímto výrobce IMMAX prohlašuje, že typ rádiového zařízení 07544L je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na těchto internetových stránkách www.immax.cz, www.immax.eu
Bezpečnostní informace k tomuto výrobku si můžete stáhnout ze stránek www.immax.cz
Pokud máte dotaz nebo potřebujete poradit, kontaktujte nás na adrese podpora@immaxneo.cz.

Poznámky

Symbol vyjadřuje, výrobek nesmí být likvidován s komunálním odpadem. Pro správnou likvidaci výrobku jej odevzdejte na určených sběrných místech.
Při likvidaci vyjměte za zařízení baterie a žárovky – pokud to lze.
Starý spotřebič odevzdávejte ve sběrnách k tomu určených, nepatří do komunálního odpadu.
Odpadní elektrická a elektronická zařízení ze soukromých domácností lze zdarma odevzdat na veřejných sběrných místech
Jako koncový uživatel odpovídáte za výmaz osobních údajů ze starého spotřebiče
ASEKOL: AK-016010, WEEE-Reg.-Nr. DE 88927148

STÁHNUTÍ APLIKACE IMMAX NEO PRO A REGISTRACE

Naskenujte kód QR kód a stáhněte si aplikaci Immax NEO PRO



Nebo v App Store nebo Google Play vyhledejte a nainstalujte aplikaci Immax NEO PRO.

- Spusťte aplikaci Immax NEO PRO a klepněte na „Registrovat“ a založte si vlastní účet.

- Pokud máte registraci hotovou, přihlaste se pod svůj účet.



PÁROVÁNÍ PRODUKTU DO APLIKACE

Příprava: Zapněte zařízení a otevřete aplikaci Immax NEO PRO. Ujistěte se, že jste připojeni na stejnou WIFI síť, na kterou bude připojen daný produkt.
Možnost přidání pomocí Bluetooth
Provedte reset zařízení – dlouze stiskněte tlačítko na zařízení na více než 5 vteřin. LED kontrolka na zařízení začne rychle blikat.
Pokud nemáte zapnutý Bluetooth na svém mobilním zařízení, tak budete k tomu vyzváni. Po zapnutí Bluetooth mobilní zařízení automaticky najde daný produkt. V aplikaci se zobrazí okno s informací o nalezení nového zařízení. Klikněte na tlačítko „Pokračovat“ a potom na tlačítko „+“. Zadejte přístupové údaje do WIFI sítě a potvrďte. Potom se daný produkt spáruje a přidá aplikaci Immax NEO PRO.

Možnost přidání bez pomocí Bluetooth
Provedte reset zařízení – dlouze stiskněte tlačítko na zařízení na více než 5 vteřin. LED kontrolka na zařízení začne rychle blikat.
V aplikaci Immax NEO PRO klikněte na záložku Místnost a potom na tlačítko „+“ pro přidání zařízení. V záložce Immax NEO vyberte produkt. Zadejte přístupové údaje do WIFI sítě a potvrďte. Potom se daný produkt spáruje a přidá do aplikace Immax NEO PRO.

SCHEMA INSTALACE



VAROVÁNÍ:

NEPŘIPOJUJTE zařízení, které překračují jmenovitý příkon této zásuvky. Mohlo by dojít k přehřátí nebo poškození zařízení nebo jiného zařízení. NEPOUŽÍVEJTE síťovou zásuvku, pokud je kabel jakýmkoliv způsobem poškozen. Mohlo by dojít k úrazu elektrickým proudem a zranění. S touto zásuvkou lze použít prodlužovací kabely; zkontrolujte, zda prodlužovací kabel zvládne napětí zásuvky.
NEZKOUŠEJTE za žádných okolností toto zařízení opravovat, rozebírat ani upravovat. Mohlo by dojít k poškození zařízení nebo k úrazu elektrickým proudem.
Neumisťujte síťovou zásuvku do blízkosti zdrojů tepla nebo na přímé sluneční světlo.
NEPOUŽÍVEJTE ani nepoužívejte síťovou zásuvku v prostředí s vysokou vlhkostí.
NEPOUŽÍVEJTE síťovou zásuvku, pokud ze zásuvky nebo připojeného zařízení vychází zvláštní zápach nebo kouř, okamžitě kontaktujte zákaznickou podporu.
NEDOTÝKAJTE se žádných elektrických spotřebičů mokřima rukama a nemanipulujte se spotřebiči v blízkosti tekutin.
Při manipulaci se zásuvkou nepoužívejte nadměrnou sílu. Udržujte síťovou zásuvku vždy suchou a čistou.
NEPOUŽÍVEJTE na napájecí zásuvku žádná rozpouštědla ani čisticí roztoky. Čistěte pouze měkkým suchým hadříkem.
Nikdy nepřetěžujte elektrické obvody, protože by to mohlo způsobit úraz elektrickým proudem nebo požár.

Bezpečnostní informace


UPOZORNĚNÍ: Uchovávejte mimo dosah dětí. Tento výrobek obsahuje malé součástky, které mohou způsobit udušení nebo zranění při požití.

VAROVÁNÍ: Každá baterie má předpoklad k úniku škodlivých chemikálií, které mohou poškodit pokožku, oděv nebo prostor kde je baterie uložena. Abyste předešli riziku zranění, nedovolte aby jakákoliv látka z baterie přišla do kontaktu s očima nebo pokožkou. Každá baterie může

prasknout či dokonce explodovat pokud je vystavena ohni nebo jiným formám nadměrného tepla. Během manipulace s bateriemi buďte opatrní. Pro snížení rizika či zranění způsobených nesprávným zacházením s bateriemi proveďte následující opatření:

- Nepoužívejte různé značky a typy baterií ve stejném zařízení
- Při výměně baterií vždy vyměňte všechny baterie v zařízení
- Nepoužívejte dobijecí nebo opakovaně použitelné baterie.
- Nedovolte dětem instalovat baterie bez dohledu.
- Dodržujte pokyny výrobce baterie pro správnou manipulaci a likvidaci baterie.

UPOZORNĚNÍ: Výrobek a baterie by měly být likvidovány v recyklačním centru. Nevyhazujte s běžným odpadem z domácnosti.
UPOZORNĚNÍ: Pro zajištění bezpečného používání výrobku je nutné v

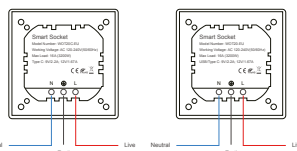

místě instalace přivést vodiče dle platných předpisů. Instalace musí být provedena pouze osobou s odpovídající certifikací v oboru elektro. Při montáži nebo při zjištění závady, musí být vždy odpojený přívodní kabel ze zásuvky (v případě přímého zapojení je nutné vypnout příslušný jistič). Nesprávná instalace může vést k poškození výrobku a zranění.

UPOZORNĚNÍ: Neprovádějte demontáž výrobku, možnost úrazu elektrickým proudem.

UPOZORNĚNÍ: Používejte pouze originální napájecí adaptér dodaný s výrobkem. Neuvádějte zařízení do provozu, pokud přívodní kabel vykazuje

známky poškození.

UPOZORNĚNÍ: Postupujte podle pokynů v přiloženém manuálu.

Údržba

Charčte zařízení před kontaminací a znečištěním. Přístroj otřete měkkým hadříkem, nepoužívejte drsný nebo hrubozrnný materiál.
NEPOUŽÍVEJTE rozpouštědla nebo jiné agresivní čističe či chemikálie.
Na tento výrobek bylo vydáno Prohlášení o shodě, více informací naleznete na www.immax.cz



Technical specifications:

Color: white
Protocol: Wi-Fi IEEE 802.11b/g/n
Frequency: 2400 MHz~2483.5 MHz
Maximum RF output power: WiFi: 20dBm
Wireless range: 30 m line of sight, 5 m in built-up area
Rated voltage: AC 230V ± 10%, 50/60 Hz
Maximum load: 3200W, 16A
USB output: 20W
Power supply: Yes
USB-A: 9V/2.2A, 12V/1.67A
USB-C: 9V/2.2A, 12V/1.67A
USB-A + USB-C: 9V/1.1A; 12V/0.84A max.
Overvoltage protection: 265V
Undervoltage protection: 90V
Working temperature: 0 °C ~ 40 °C (32 °F ~ 104 °F)
Working humidity: 10% ~ 90%
Protection level: IP20
Functions in the application: ON / OFF, Timer, Countdown, Consumption measurement
Size: 8 cm x 8 cm x 5 cm
Weight: 129g
Package content: Internal socket, user manual

Abbreviated version of the declaration of conformity
Hereby, the manufacturer IMMAX declares that the radio equipment type 07544L is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available on the following websites www.immax.cz, www.immax.eu
You can download the safety information for this product from www.immax.cz
If you have any questions or need advice, please contact us at podpora@immaxneo.cz.

Notes

The symbol indicates that the product must not be disposed of with municipal waste. For proper disposal of the product, please hand it in at designated collection points. When disposing of the device, remove the batteries and bulbs – if possible. Please hand in your old appliance at designated collection points; it does not belong in municipal waste. Waste electrical and electronic equipment from private households can be handed in free of charge at public collection points
As the end user, you are responsible for erasing personal data from your old appliance
ASEKOL: AK-016010, WEEE-Reg.-Nr. DE 88927148

DOWNLOADING THE IMMAX NEO PRO APP AND REGISTERING

Scan the QR code and download the Immax NEO PRO app
Or search for and install the Immax NEO PRO app in the App Store or Google Play.
- Launch the Immax NEO PRO app and tap "Register" to create your own account.
- If you have completed your registration, log in to your account.

PAIRING THE PRODUCT TO THE APP

Preparation: Turn on the device and open the Immax NEO PRO application. Make sure you are connected to the same WIFI network to which the product will be connected.
Option to add via Bluetooth
Reset the device - long press the button on the device for more than 5 seconds. The LED indicator on the device will start flashing quickly.
If you do not have Bluetooth turned on on your mobile device, you will be prompted to do so. After turning on Bluetooth, the mobile device will automatically find the product. A windows will appear in the application with information about finding a new device. Click the "Continue" button and then the "+" button. Enter the access data to the WIFI network and confirm. Then the product will be paired and added to the Immax NEO PRO application.

Option to add without using Bluetooth
Reset the device – long press the button on the device for more than 5 seconds. The LED indicator on the device will start flashing quickly.
In the Immax NEO PRO application, click on the Room tab and then on the "+" button to add the device. In the Immax NEO tab, select the product. Enter the access data to the WIFI network and confirm. Then the product will be paired and added to the Immax NEO PRO application.

WARNING:

DO NOT connect devices that exceed the wattage rating of this outlet. This may cause overheating or damage to the device or other equipment.
DO NOT use the outlet if the cord is damaged in any way. This may cause electric shock and injury. Extension cords may be used with this outlet; make sure the extension cord is rated for the outlet voltage.
DO NOT attempt to repair, disassemble, or modify this equipment under any circumstances. This may cause damage to the equipment or electric shock.
DO not place the outlet near heat sources or in direct sunlight.
DO NOT use or operate the outlet in high humidity environments.
DO NOT use the power outlet if there is a strange smell or smoke coming from the outlet or connected device, contact customer support immediately.
DO NOT touch any electrical appliances with wet hands or handle the appliance near liquids.
Do not use excessive force when handling the outlet.
Always keep the power outlet dry and clean.
DO NOT use any solvents or cleaning solutions on the power outlet. Clean only with a soft, dry cloth.
Never overload electrical circuits as this could cause electric shock or fire.

Safety Information

WARNING: Keep out of reach of children. This product contains small parts that may cause choking or injury if swallowed.

WARNING: Each battery has the potential to release harmful chemicals that can damage skin, clothing, or the area where the battery is stored. To avoid the risk of injury, do not allow any substance from the battery to come into contact with eyes or skin. Each battery can may burst or even explode if exposed to fire or other forms of excessive heat. Be careful when handling batteries. To reduce the risk of injury or damage from improper handling of batteries, take the following precautions:
- Do not use different brands and types of batteries in the same device
- When replacing batteries, always replace all batteries in the device
- Do not use rechargeable or reusable batteries.

- Do not allow children to install batteries without supervision.
- Follow the battery manufacturer's instructions for proper handling and disposal of the battery.

WARNING: The product and batteries should be disposed of at a recycling center. Do not dispose of with normal household waste.

WARNING: To ensure safe use of the product, it is necessary to The installation site must be equipped with wires in accordance with applicable regulations. Installation must only be carried out by a person with the appropriate electrical certification. During installation or when a defect is detected, the power cable must always be disconnected from the socket (in the case of direct connection, the relevant circuit breaker must be turned off). Incorrect installation may result in damage to the product and injury.

WARNING: Do not disassemble the product, there is a risk of electric shock.

WARNING: Use only the original power adapter supplied with the product. Do not operate the device if the power cable shows signs of damage.

WARNING: Follow the instructions in the enclosed manual.

Maintenance

Protect the device from contamination and dirt. Wipe the device with a soft cloth, do not use rough or coarse-grained material.
DO NOT USE solvents or other aggressive cleaners or chemicals.
A Declaration of Conformity has been issued for this product, more information can be found at www.immax.cz



6

7 8

9 10

5

3 4

1 2